



# Ematic Funtab FTABXXX Camera Replacement

This guide will help you replace a malfunctioning camera.

Written By: Dustin Clark





## TOOLS:


- [iFixit Opening Tools](#) (1)



## PARTS:



- [new camera](#) (1)

## Step 1 — Camera

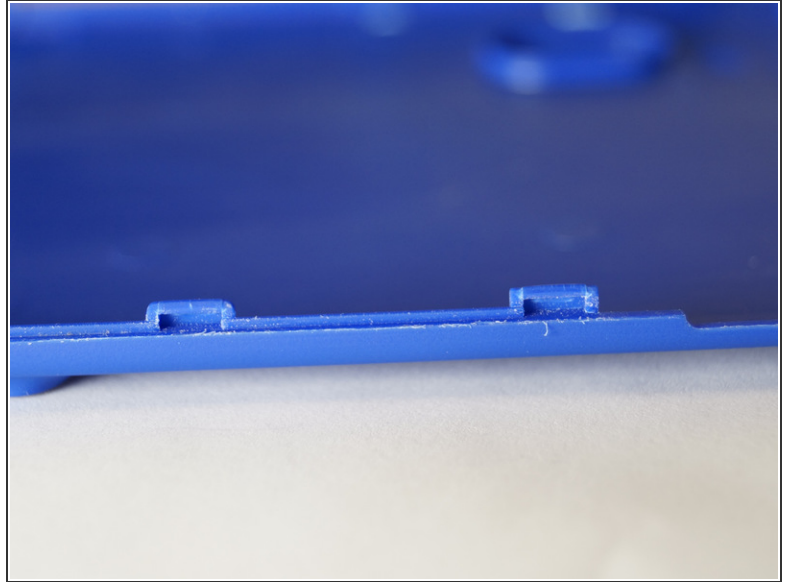


- First, be sure to power off the device.
- Carefully pry open the device. Note the plastic tabs in the image that hold the device together.

## Step 2

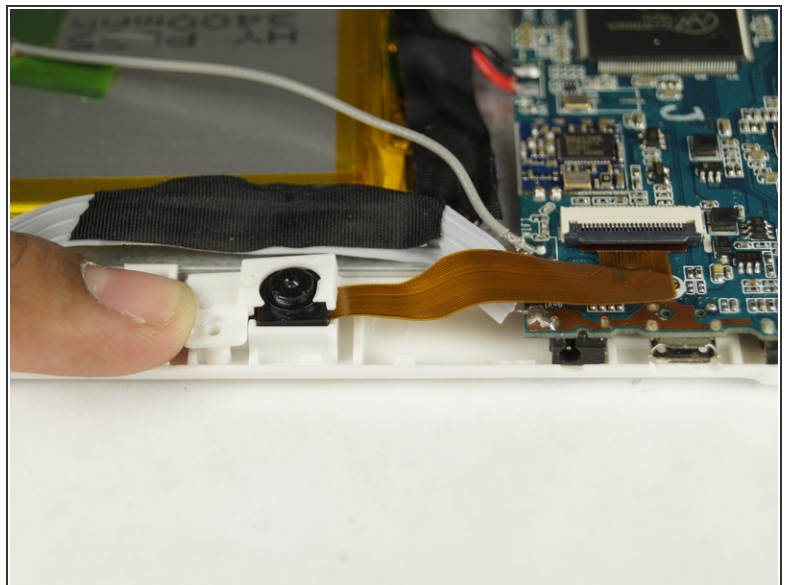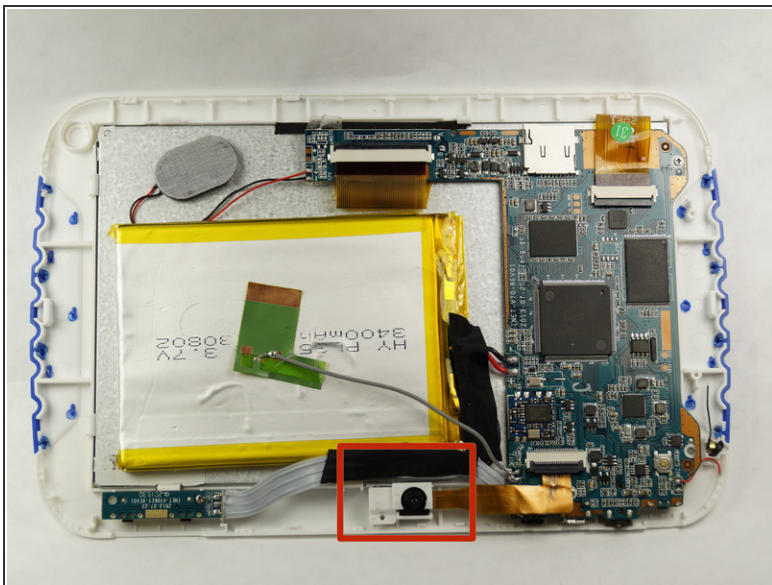


- Locate the camera in the top of the device. Note the plastic clip holding it in place.

## Step 3

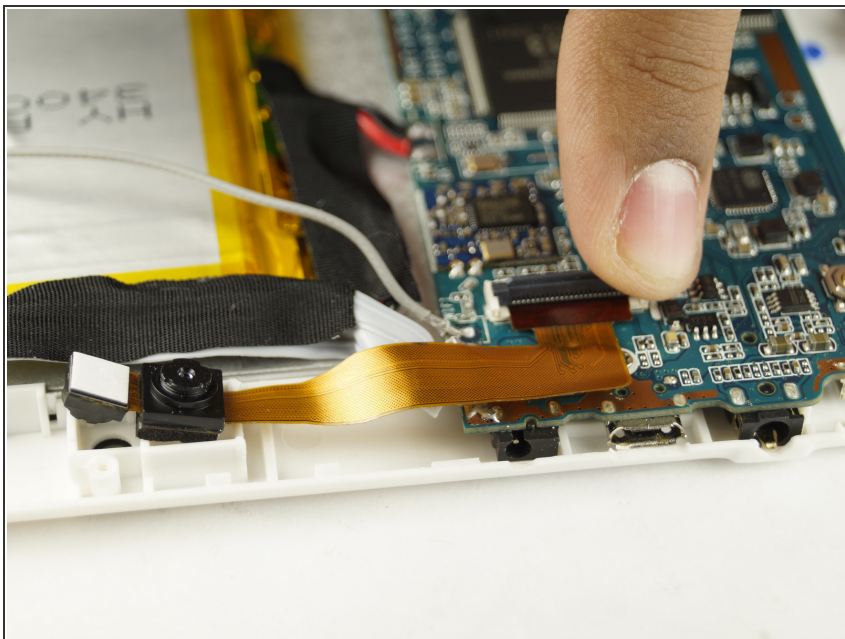

- Carefully remove the white clip holding the camera.
- Carefully lift the data cable connecting the camera to the device's motherboard.

## Step 4

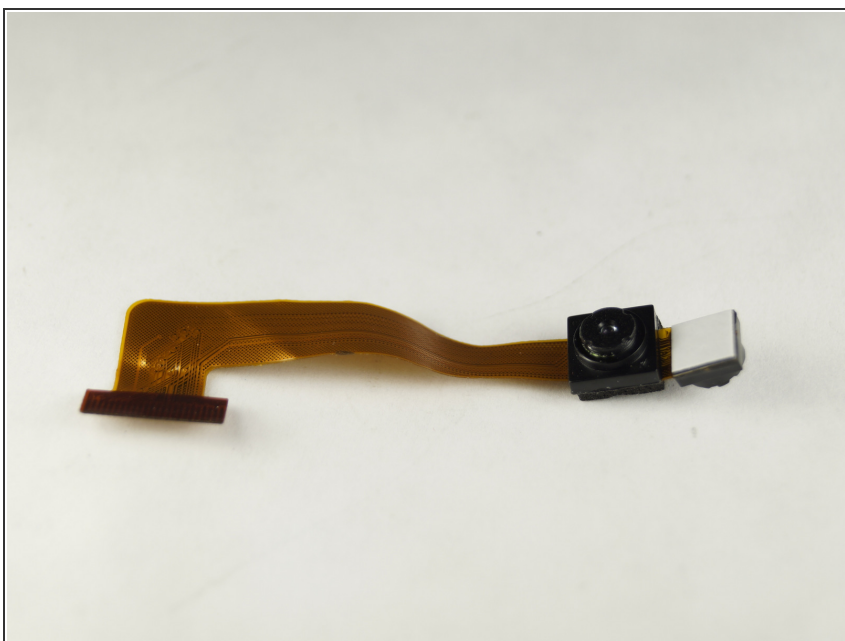

- Take the new camera piece and insert the data cable connection into the connection.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:43:24 AM.